

BRICKGUARD



PROTECT YOUR INVESTMENT

A brick guard provides extra protection for your telehandler. There are two separate brick guards - one for the top and one for the front. Brick guards are ideal for sites lifting brick, block or any other debris that can fall.

Features:

- ASTM A36 steel construction
- Open and closed cab applications
- No affect on the use of the windshield wiper



Description	JLG Machine Models	JLG Part Number
Top Brick Guard	G5-18A	1001081286S
	G9-43A/G10-43A	1001100879S
	G10-55A/G12-55A	
	G6-42A	
	G15-44A	1001199380
	642/742/943/1043/1055/1255	
	1075, 2733	
	1644/1732	1001160496
Front Brick Guard	G5-18A	1001081287S
	G9-43A/G10-43A	1001100880S
	G10-55A/G12-55A	
	G6-42A	
	G15-44A	1001199381
	642/742/943/1043/1055/1255	
	1075, 2733	
	1644/1732	1001212845
	1001160506	

Order Today

Online: onlineexpress2.jlg.com

Call: 1-877-554-5438 | Fax: 1-800-733-8939



JLG INDUSTRIES, INC.
Toll-free US 877-JLG-LIFT
JLG.com

An Oshkosh Corporation Company

BRICKGUARD



PROTECT YOUR INVESTMENT

Top & Front Guards	G5-18A	1001258137
	642/742/943/1043/1055/1255	1001199382
	1075, 2733	1001199382
	1644/1732	1001172774
	R1370/R1385/R11100	1001275965S

NOTES:

- When assembling a front brick guard with a top brick guard (p/n 1001100879), the top brick guard flange should be mounted under the front brick guard flange.
- For machines equipped with work lights, the work lights should be mounted below the brick guard's upper mounts.
- When installing a top brick guard with the A/C option, the brick guard should be mounted underneath the condenser and use the same hardware that is supplied with the A/C kit. Discard P/N 0641608, 3271601, 4711600 and 4761600.

Order Today

Online: onlineexpress2.jlg.com
Call: 1-877-554-5438 | **Fax:** 1-800-733-8939

